

HOOVER®


Owner's Manual

Elite™ *Supreme*

Dual Purpose
Vacuum Cleaner



Review
this manual
before
Operating
cleaner

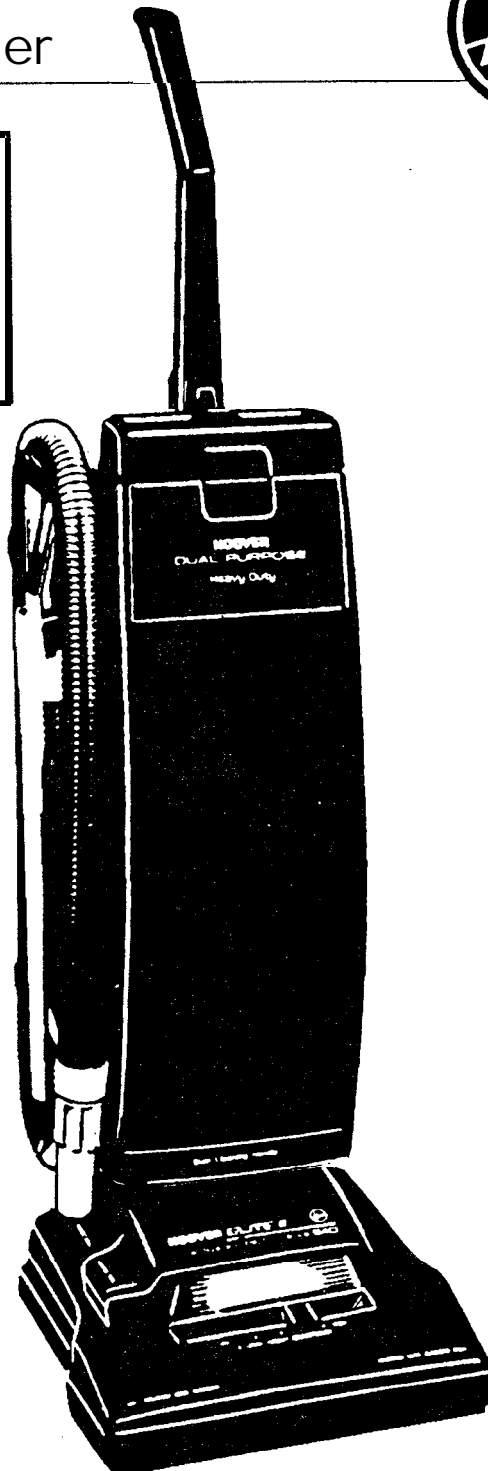

Thank you for selecting a HOOVER product.

This cleaner was inspected and packaged carefully before being shipped from the factory. If you should happen to need assistance during assembly or operation, call

1-800-944-9200 for an automated referral of authorized service outlet locations (U.S. only) or
1-216-499-9499 to speak with a representative in our Consumer Response Center.

DO NOT RETURN THIS PRODUCT TO THE STORE.

Fill in and retain

This vacuum cleaner is a combination cleaner. It is designed for carpet and rug cleaning and may be used with cleaning tools for other tasks.

The model and serial number are located on the bottom of the cleaner.

For your personal records, please enter the **COMPLETE** model and serial number in the spaces provided and retain this information.

Your cleaner is model _____

and has serial number _____

It is suggested that you attach your sales receipt to this owner's manual. Verification of date of purchase may be required for warranty service of your HOOVER product

Save!

Index

Assembling Cleaner	3-10
Cleaner Descriptions	11
Cleaning Effectiveness Per Amp Rating.....	24
How To Use	
Cleaning Tools	15-16
Upright Cleaner	12-14
If You Have a Problem	23
Important Safeguards	2
Lubrication	23
Maintenance	
Authorized Service	24
Replacing Agitator	22
Replacing Belt	20-22
Replacing Headlight	18-19
Replacing Paper Bag	17-18
Unpacking Cleaner	3
Warranty	26



Important Safeguards!

When using an electrical appliance, always follow basic precautions, including the following:

READ ALL INSTRUCTIONS BEFORE USING THIS APPLIANCE


Warning: To reduce the risk of fire, electric shock, or injury:

- Do not use outdoors or on wet surfaces.
- Close supervision is necessary when any appliance is used by or near children. Do not allow vacuum cleaner to be used as a toy or to run unattended at any time.
- Keep hair, loose clothing, fingers, feet and all parts of body away from openings, rotating agitator and other moving parts. Do not operate cleaner in bare feet or when wearing open toe shoes or sandals.
- Do not pick up anything that is burning or smoking, such as cigarettes, matches, or hot ashes.
- Do not use to pick up flammable or combustible liquids such as gasoline or use in areas where they may be present.
- Avoid picking up hard, sharp objects with the cleaner. They may damage the cleaner and the bag.
- Always turn off this appliance before connecting or disconnecting hose.
- Do not use without dust bag or filters in place. Change bag frequently when picking up very fine materials such as powder.
- Use extra care when cleaning on stairs.
- Do not put any object into openings. Do not use with any opening blocked; keep free of dust, lint, hair, or anything that may reduce air flow.
- Do not pull or carry by cord, use cord as a handle, close door on cord or pull cord around sharp edges or corners. Do not run appliance over cord. Keep cord away from heated surfaces.
- Always disconnect cord from electrical outlet before servicing the cleaner.
- Unplug cleaner when not in use. Turn off all controls before unplugging.
- Do not unplug by pulling on cord. To unplug, grasp the plug, not the cord. Never handle plug or appliance with wet hands.
- The use of an extension cord is not recommended.
- Do not use with damaged cord or plug. If appliance is not working as it should, has been dropped, damaged, left outdoors, or dropped into water, take it to a Hoover Factory Service Center or Authorized Hoover Warranty Service Dealer (Depot).
- Use vacuum cleaner only for its intended use as described in the instructions. Use only attachments recommended by The Hoover Company; others may cause hazards.

Save these instructions!

Assembling cleaner

It is extremely important to read and **follow all** the instruction steps in order.

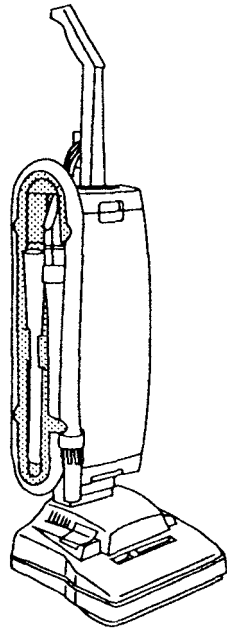

The assembled cleaner will look like this drawing.

If you need assistance with any step of the assembly, call

1-800-944-9200 for an automated referral of authorized service outlet locations (U.S. only) or

1-216-499-9499 to speak with a representative in our Consumer Response Center.

This cleaner is intended for household use.


Side mounted hose trademark of The Hoover Company

STEP 1: Unpack carton


Remove all parts from carton and identify each item shown.

Make sure all parts, especially small items such as E, F, and I, are located before disposing of cardboard packing.

- A. Upper handle
 - B. Lower handle
 - C. Cord
 - D. Tool rack*
 - E. Tool rack screw packet*
 - F. Bracket
 - G. Bag compartment
 - H. Cleaner body
 - I. Handle bolt and nut packet (one extra nut included)
 - J. Paper bag
 - K. Hose and cleaning tools*
 - L. Wand*
- Some models only.

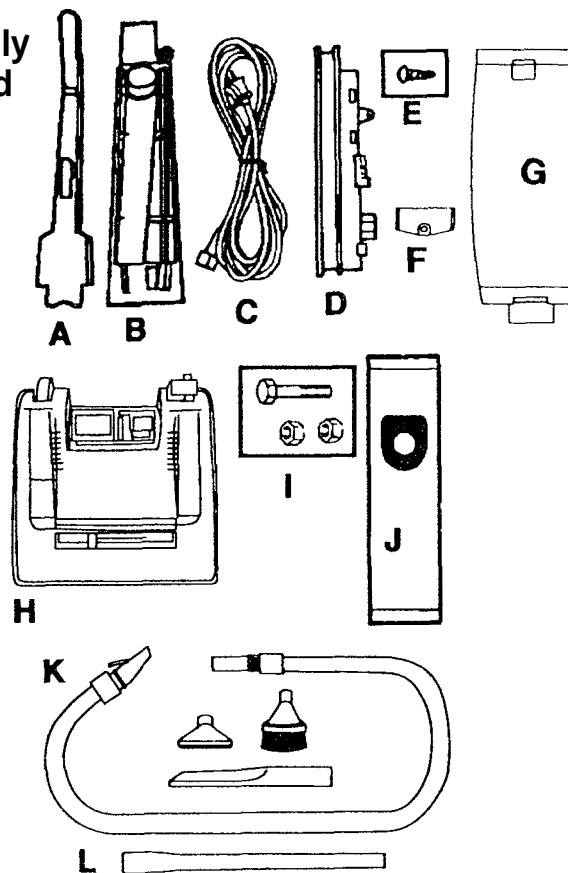

STEP 2: Assemble handle

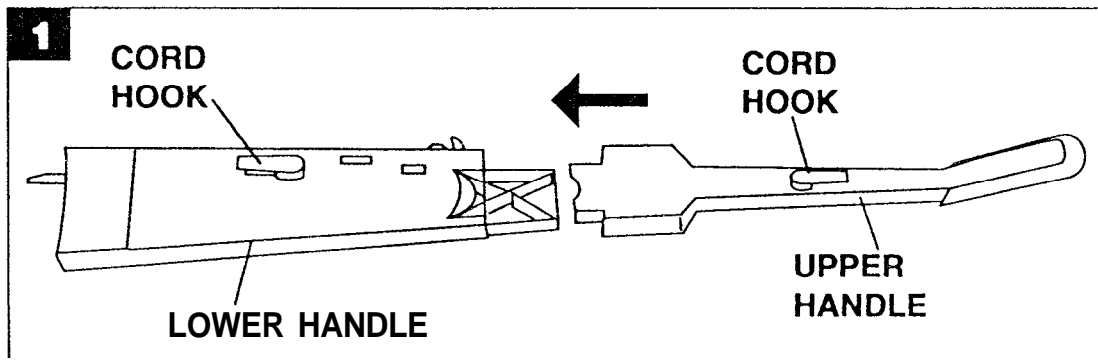


Place upper and lower handle sections on a flat surface with cord hooks on top. With hands on sides of handle sections, push sections together firmly until they "click" into place (Fig. 1).

***Be careful not to press against the rod extending from the lower handle. (Fig. 2) If the rod breaks or bends, the cleaner will not work properly. Do not push handle together with your hands on the ends of the sections.**

STEP 3: Attach cord


Note: The **small red tab** above the ON/OFF switch is for **shipping purposes only** and may fall off during assembly. If it does not fall off, the tab will be removed during the final steps of assembly.

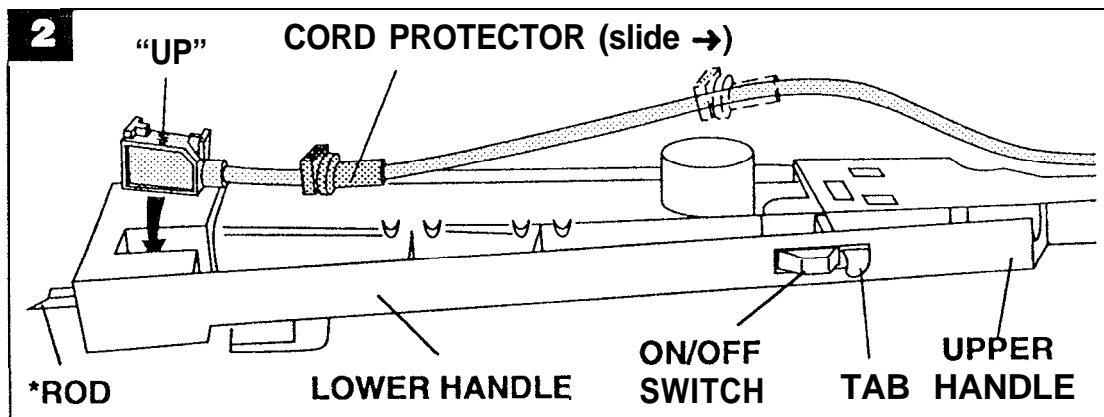


Turn handle over. Insert **large** rectangular end of cord into pocket in bottom of handle, with side marked "UP" visible. (Fig. 2)

Make sure rectangular end is pushed into the handle as far as possible. (Fig. 3)



Slide cord protector toward upper handle.(Fig. 2)

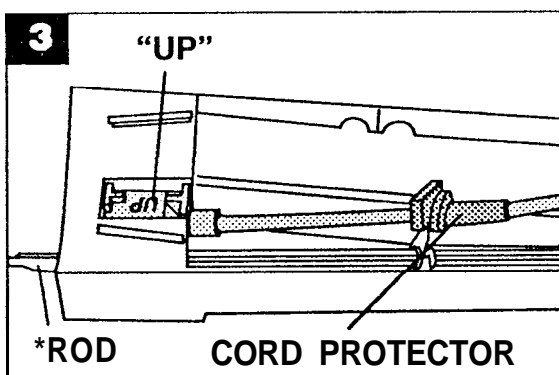


Continued → 4 ,

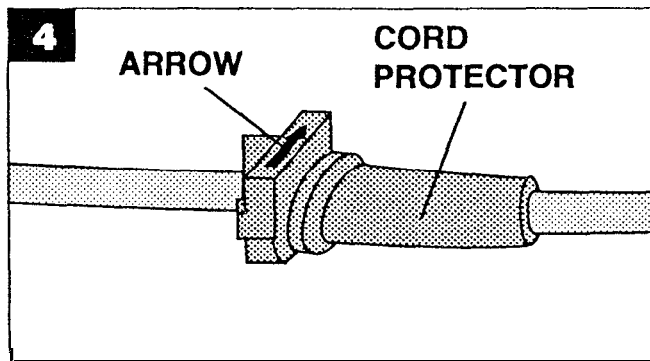

Rotate cord protector on cord until you see its arrow. (Fig. 4)

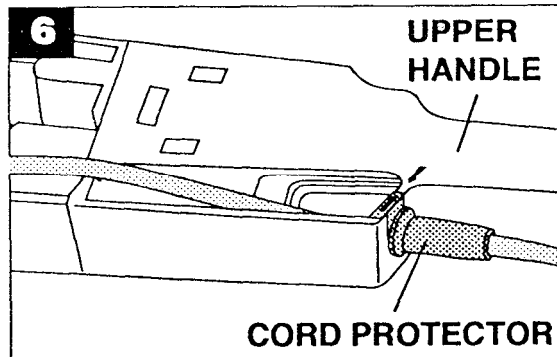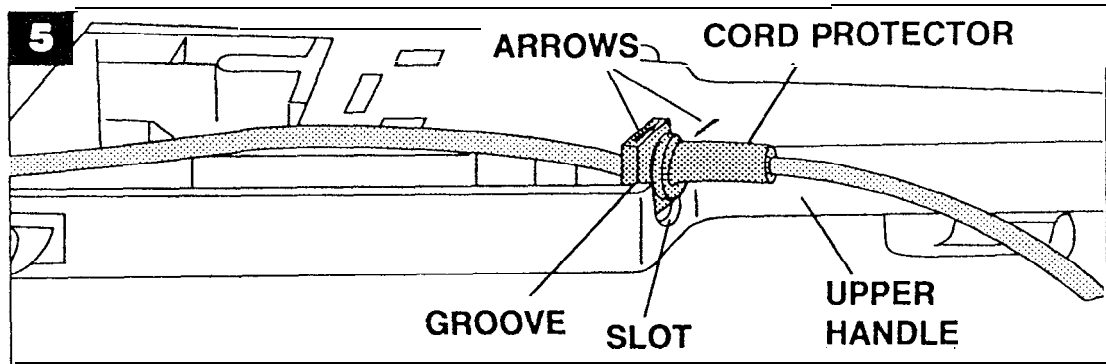


With arrow on cord protector pointing toward arrow on upper handle, press groove in cord protector into slot in upper handle. (Fig. 5 and 6)

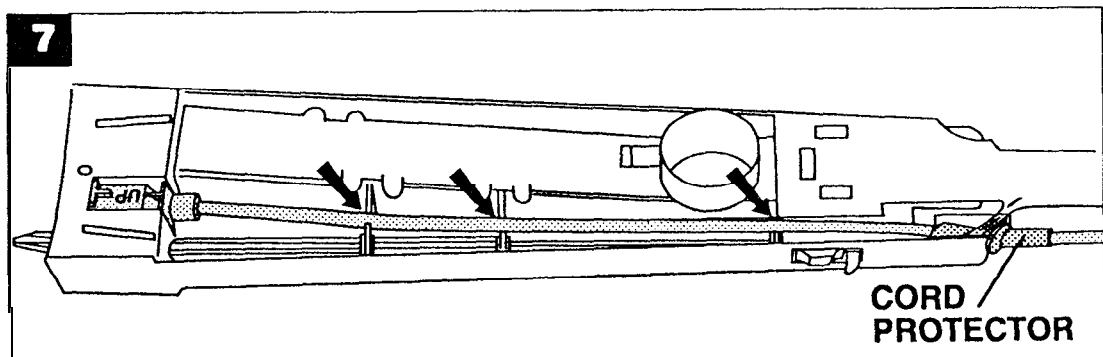


Pull cord tight.

Press cord into place at each of the three notches indicated. (Fig. 7)

Do not plug cleaner in until assembly is totally complete.

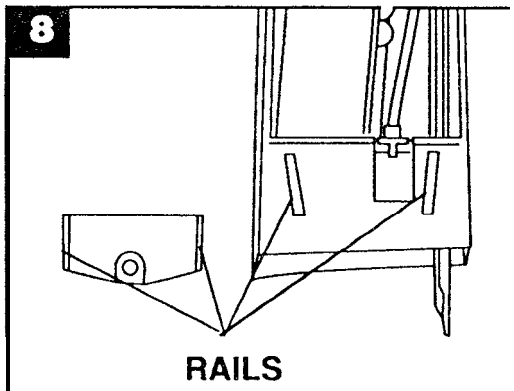


Note location of tapered rails on bracket and on lower handle. (Fig. 8)

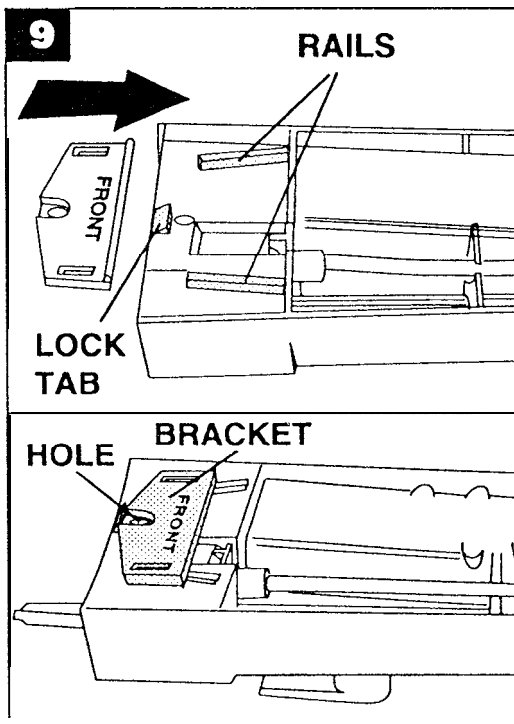

With printed side of bracket facing up, slide rails on bracket onto rails on lower handle until bracket snaps past the lock tab. (Fig. 9)

Pull bracket toward bottom of handle slightly to make sure bracket is locked in place.

Make sure hole in bracket aligns with hole in handle.

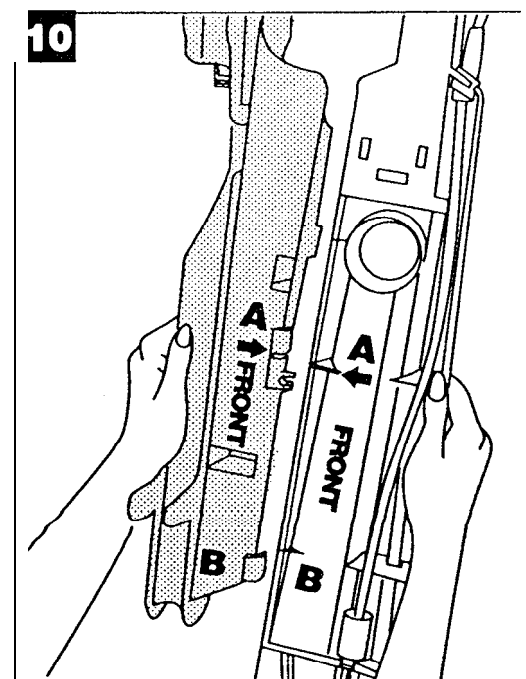


STEP 4: Attach tool rack

(some models only)


If the cleaner you have purchased does not come with a tool rack, proceed to Step 5.

Hold tool rack and handle side by side as shown.(Fig. 10)

Continued →

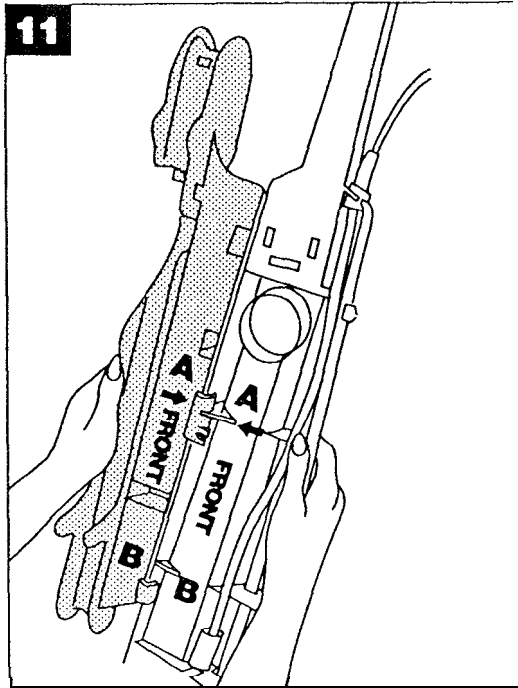

Hook tool rack over left edge of handle, matching arrows and letters. (Fig. 11)

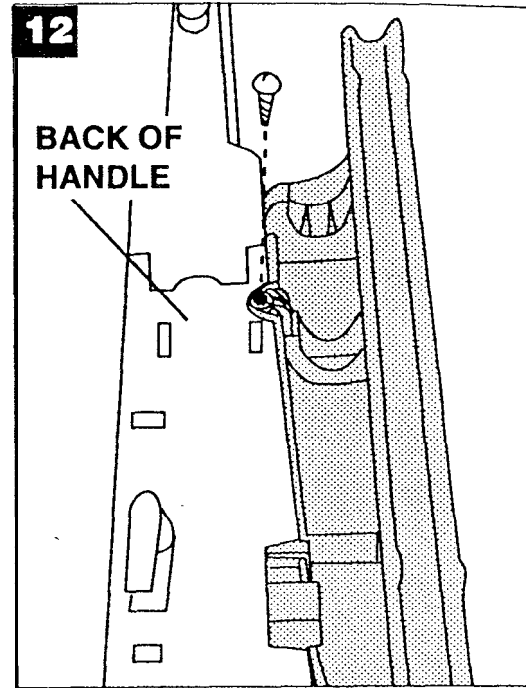

Holding tool rack in place, turn handle over and align screw holes. Insert **small screw** (Fig. 12), and **tighten securely**. (Extra effort may be required).

STEP 5: Attach handle



With cord hooks to the back, place assembled handle onto handle base of cleaner body. (Fig. 13)


Rock handle side to side while pushing down firmly. Extra pushing effort may be required.

Push **bolt** into hole on lower **front of handle**. (Fig. 14)

If bolt will not go through hole easily, check the following:


- the bracket is properly positioned (see Fig. 9)
- the handle is pushed completely down (see Fig. 13).

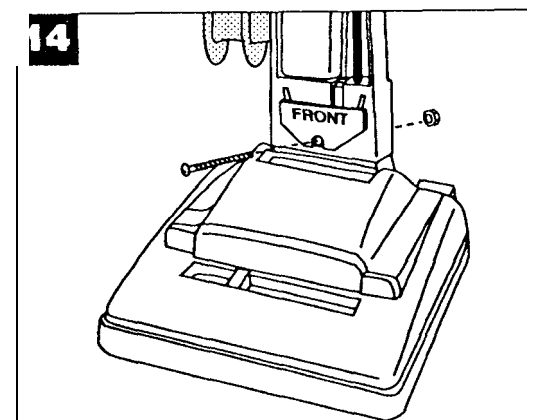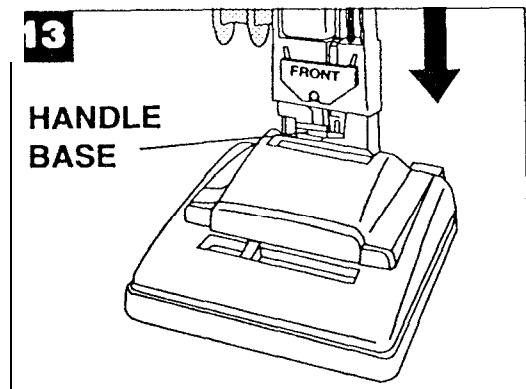

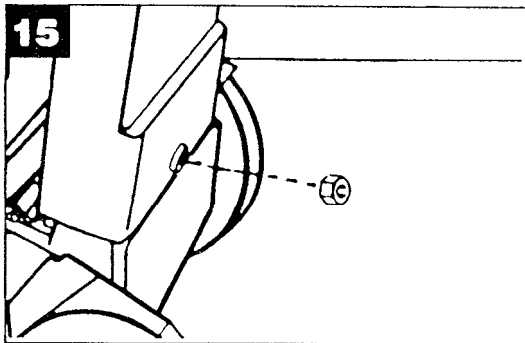


Place **nut** in recessed area at **back of handle**. Hold nut in place while tightening bolt securely with a screwdriver. (Fig. 15)

Note: Only one nut is needed on this model. The extra nut is not required but has been provided for your convenience.

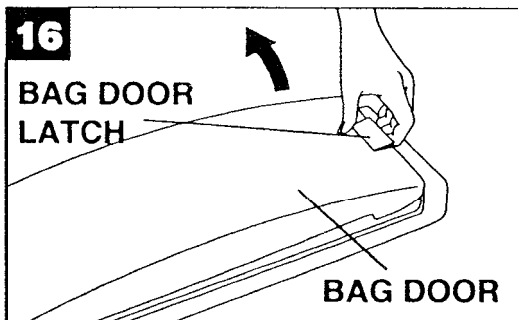


STEP 6: Attach bag compartment

Pull bag door latch forward and remove door. Set bag door aside. (Fig. 16)

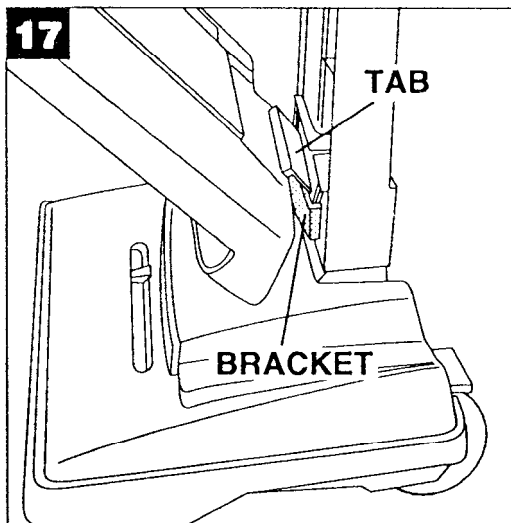

Slide large tab on bottom, back of bag compartment into slot between the bracket and the lower handle. (Fig. 17)

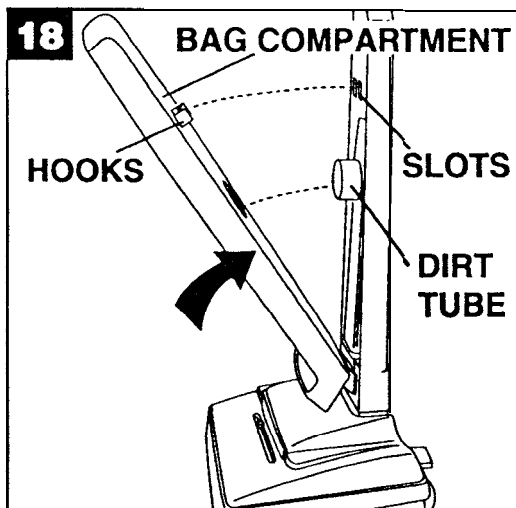

Note round opening and hooks on back of bag compartment.

Place opening over dirt tube and align hooks with slots in handle.


Press firmly to snap both hooks into handle. (Fig. 18)

Pull on bag compartment to make sure it is completely snapped to handle.


Continued → 8

STEP 7: Attach paper bag

Align opening in paper bag with dirt tube inside bag compartment. (Fig. 19)

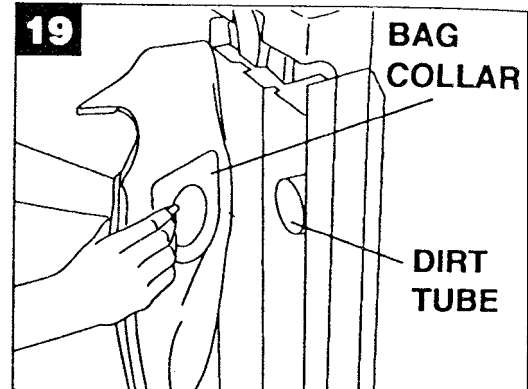


Push bag collar **firmly** onto dirt tube. (Fig. 20)

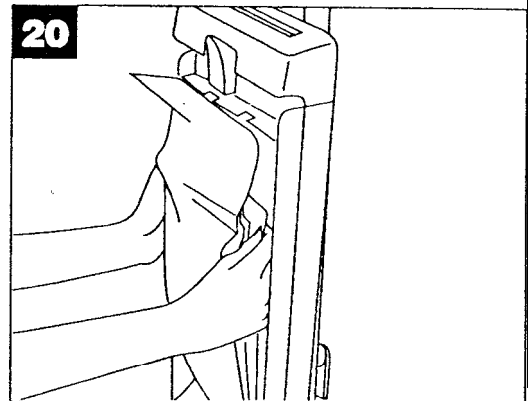

Tuck top and bottom of bag into bag compartment.


To replace bag door, insert the tabs on bottom of bag door into the slots on bag compartment. (Fig. 21)

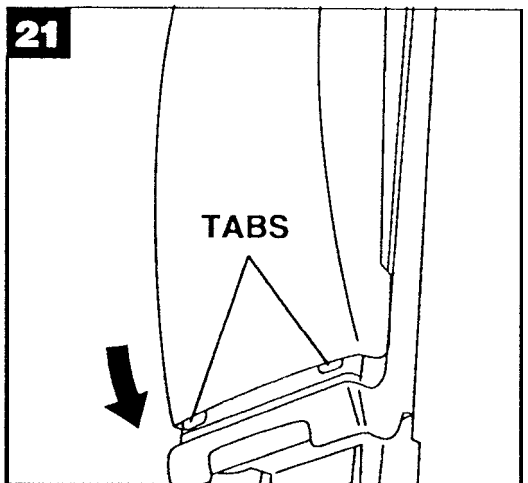

Make sure all edges of paper bag are completely inside the bag compartment.

Close door.


Break off red tab above ON-OFF switch by pushing down on tab. (Fig. 22)

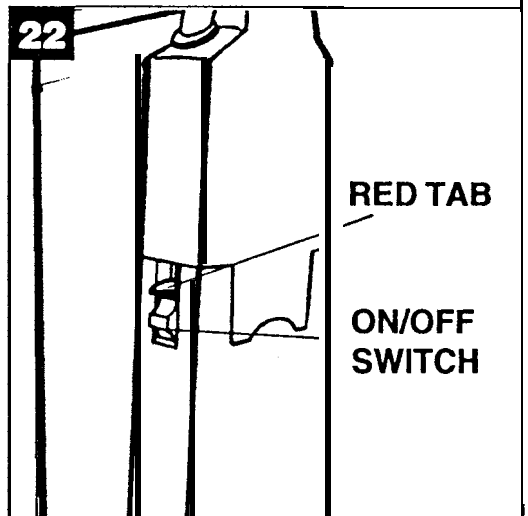


Note: If tab has come off during assembly make sure switch is in the OFF position (down) before plugging cord into an electrical outlet.

STEP 8: Attach hose and tools

(some models only)

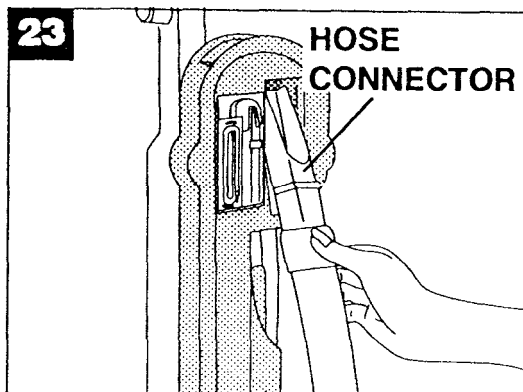


Insert hose connector into side of rack. (Fig. 23)

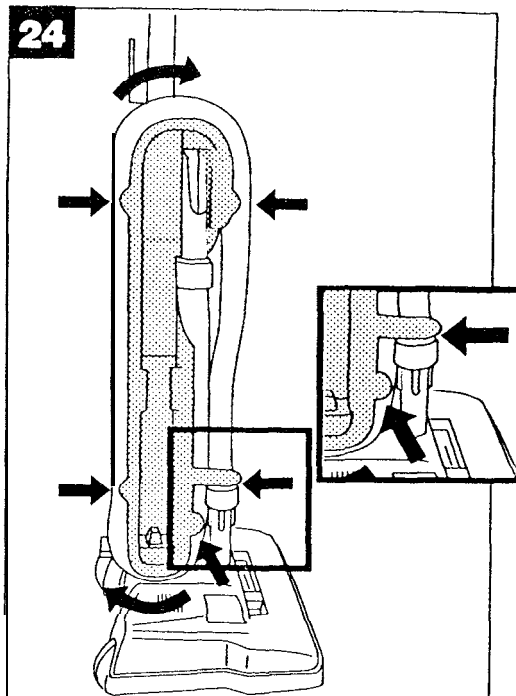


While wrapping hose in a clockwise direction, push it firmly into rack at areas shown. (Fig. 24)

Note: To keep hose secured, place round end of hose **below** bottom extension. (Fig. 24, inset)

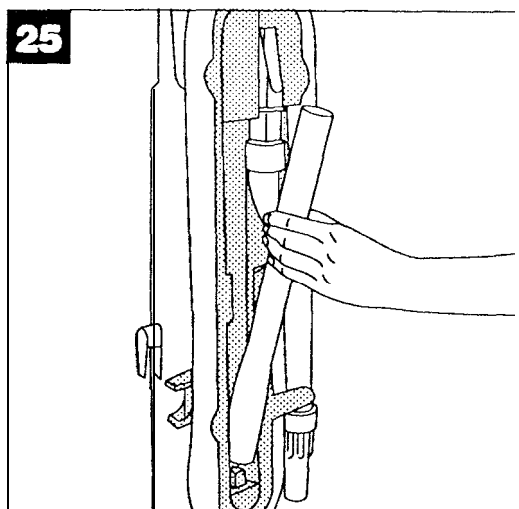



Position wand in side of tool rack and snap into place. (Fig. 25)

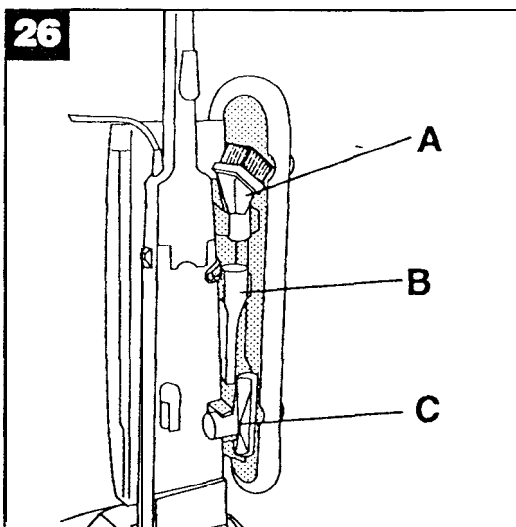

Snap dusting brush (A), crevice tool (B) and furniture nozzle (C) into back of tool rack as shown. (Fig. 26)

CAUTION: When cleaner is turned on, the agitator brush roll will continue to rotate while cleaner handle is in upright position. Avoid tipping cleaner or setting it on furniture, fringed area rugs or carpeted stairs during tool use.

The assembled cleaner will look like the drawing below.

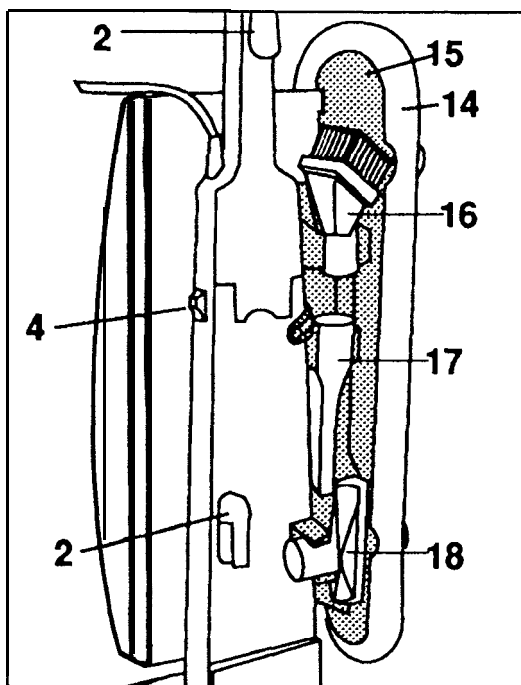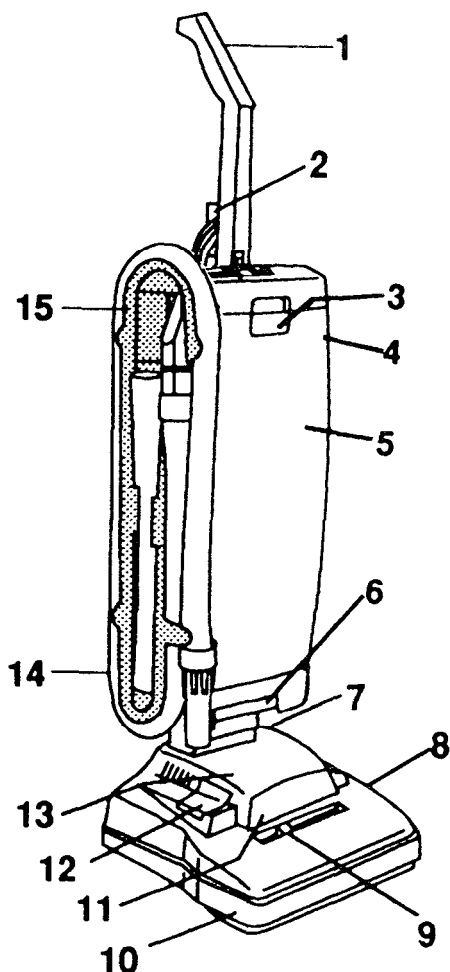

Cleaner description

1. Handle

2. Cord hooks: wrap cord around hooks for storage. The top hook can be rotated right or left for easy cord release.

3. Bag door latch

4. ON/OFF switch: located on side of handle.

5. Bag door

6. Stair cleaning handle: located on lower edge of bag.

7. Handle release lever: step on lever to lower handle to operating or low position.

8. Cleaner body

9. Nozzle control knob: slide knob to correct setting for height of carpet being cleaned.

10. Furniture guard: helps prevent cleaner from marking furniture.

11. Headlight

12. Hose door: open door to connect hose to cleaner.

13. Hood

14. Hose*

15. Tool rack*


16. Dusting brush'

17. Crevice tool*

18. Furniture nozzle*


* Available on some models.

Operate cleaner only at voltage specified on bottom plate on bottom of cleaner.

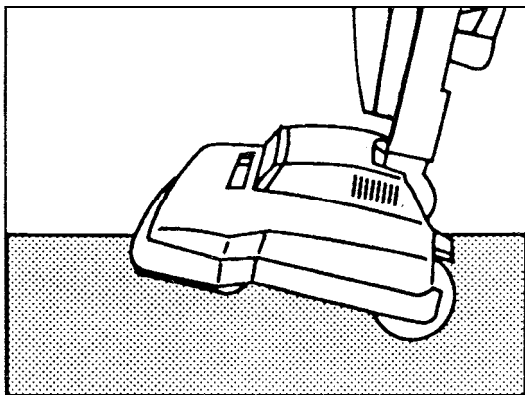

How to use

To reduce the risk of electric shock, this appliance has a polarized plug (one blade is wider than the other). This plug will fit in a polarized outlet only one way. If the plug does not fit fully in the outlet, reverse the plug. If it still does not fit, contact a qualified electrician to install the proper outlet. Do not change the plug in any way.

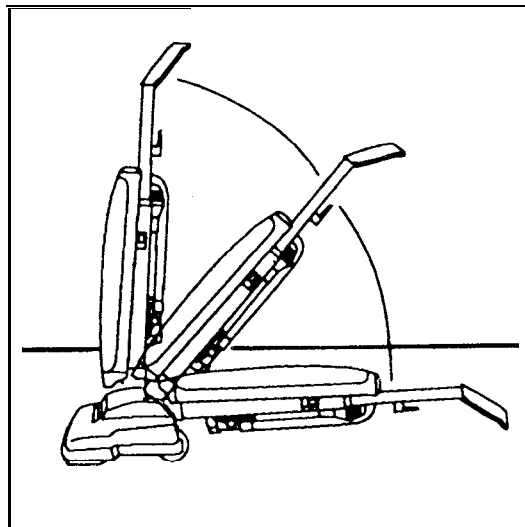


To turn cleaner on, push switch up. To turn cleaner off, push switch down.

Plug cord into electrical outlet. Turn cleaner on and, with handle in upright position, pull back on handle until front of cleaner is lifted off the carpet. This insures that the paper bag is inflated.


Handle positions

The handle of your cleaner has three positions; **upright** for storage and when using cleaning tools; **operating** for general operation on carpet and floors; low for reaching under low furniture. Step on handle release lever to lower handle.

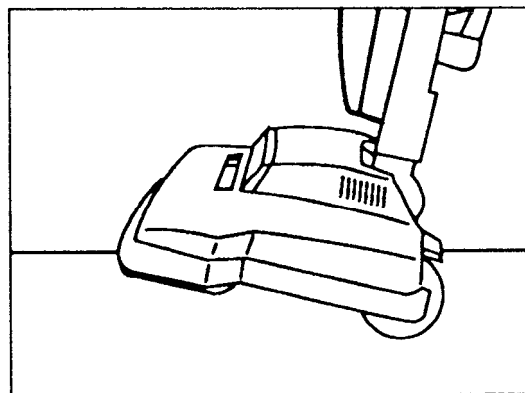

Transporting cleaner


To move your cleaner from room to room, put handle in upright position, tilt cleaner back on rear wheels and push forward.

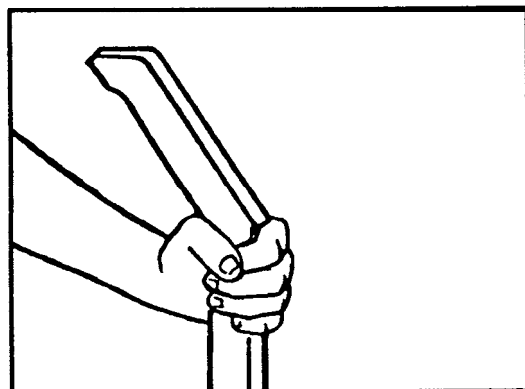


The cleaner can also be moved by lifting it as shown.

Carpet **height** adjustment

The cleaning of carpet and rugs takes place at the nozzle.

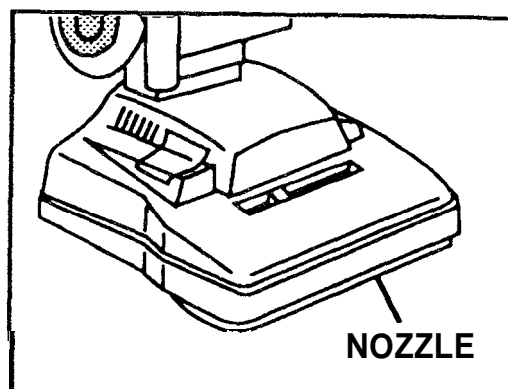


It is necessary to raise and lower the nozzle for various carpet pile heights by sliding the nozzle control knob to the correct setting.

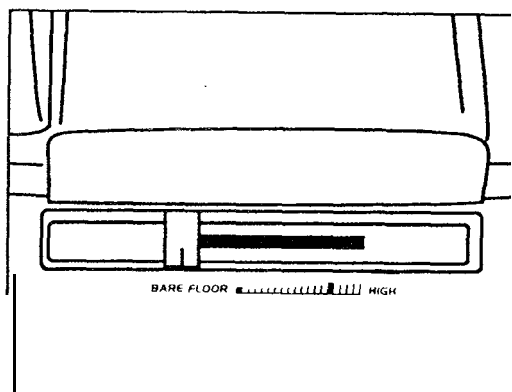

For ease in sliding knob, the handle should be in the upright position.

The nozzle will not move into the adjusted position until the cleaner handle is lowered to the operating position.

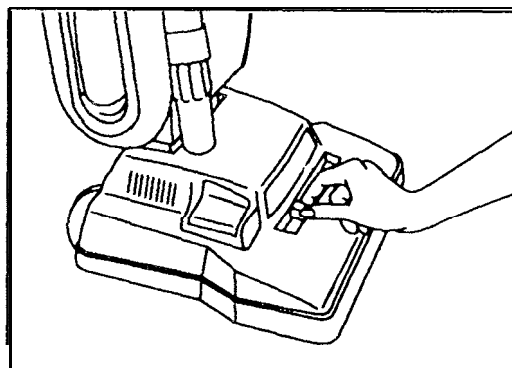

For maximum cleaning performance the following carpet height settings are recommended.



Cleaners with two settings:

- **Lowest setting (A):** for bare floors and all types of carpet.
- **Highest setting (B):** if easier pushing is desired while maintaining good cleaning performance.

Cleaners with Four settings:

- **Lowest setting (1):** for bare floors and low pile, level loop, kitchen type carpet.
- **Next setting (2):** for other types of carpet.
- **Higher settings (3-4):** for very deep pile carpet where easier pushing effort is desired, while maintaining good cleaning performance.

Note: If the cleaner is difficult to push, slide the knob to the next higher setting.

Part No. 58547-071 (R16)

The Hoover Company
101 East Maple Street
North Canton, OH 44720

Please complete this entire form!

☐ 4010001A ☐ 160147AG
☐ 4010324A ☐ 049258AG
☐ 57363003 ☐ 38528027
☐ 38528008 ☐ 38634074

No. of Items
Ordered:

SHIP TO:

Please Print Your Name and Address carefully in Ink.
Please allow 3 to 4 weeks for delivery.

Name _____

Street _____

City _____ State _____ Zip _____

Detach Order Form Here

PACKAGE NUMBER		No. In Pack	Cost/ Per Pack	No. of Packs	TOTAL
Type A Disposable bags	4010001A	3	\$ 3.95		
	4010324A	10	\$11.95		
BreatheEasy™ MicroFiltration Type A Disposable bags	4010100A	3	\$ 8.75		
Air freshener tablets	57363003	4	\$ 2.50		
Concept One'™ / PowerMAX™ Agitator belt	38528008	1	\$ 1.95		
Power Drive'™ belt	160147AG	1	\$ 1.15		
Convertible™/Decade 80™/Decade 800™ Agitator belt	049258AG	1	\$ 1.15		
Elite™/Legacy™/Priction™/tensionAgitatorandbelt	38528027 38634074	11	\$ 1.15 1.95		

TOTAL MERCHANDISE \$**ADD YOUR APPLICABLE STATE TAX +****SHIPPING & HANDLING + \$ 4.50****TOTAL COST \$****PAYMENT METHOD:**☐ Check or Money Order payable to: The Hoover Company☐ Visa ☐ Mastercard Card Number _____

Name on Card _____ Exp. Date: _____

Signature (Required) _____

Daytime Phone & Area Code _____

Use this form to order HOOVER disposable bags, belts, bulbs, spare tools and air freshener tablets directly from THE HOOVER COMPANY, NORTH CANTON, OHIO. These items will be shipped to your home freight prepaid. They may also be purchased from your local Hoover dealer or Hoover Factory Service Center. See your Yellow Pages for listings.

Please detach order form and enclose with your check, money order, or credit card information. Mail-in orders limited to U.S. residents only.


Hoover® *Hornet*™

Compact Canister Vacuum Cleaner



This multi-purpose cleaner with full-size power will go where you need to clean!




- Just the right size for cleaning stairs.

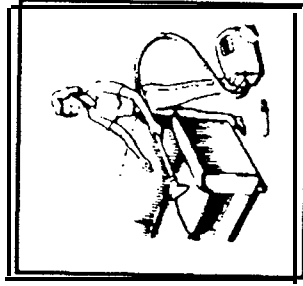

- Perfect for cleaning all around the house.

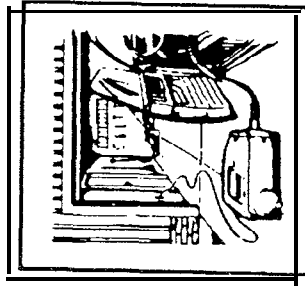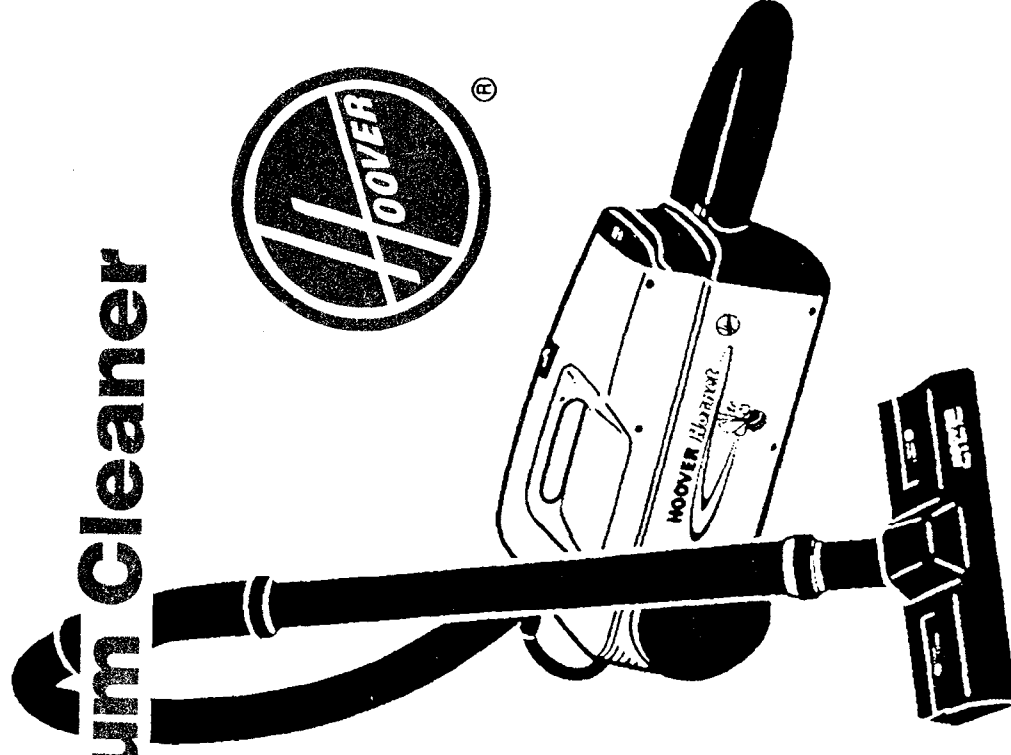


- Perfect for use in the car or shop.

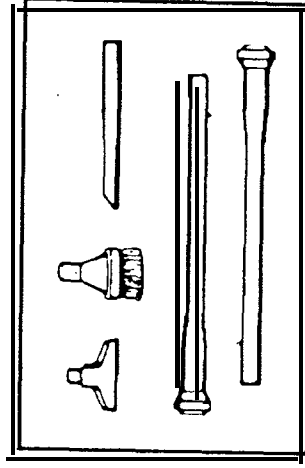

- Light enough for overhead cleaning. Accessories make it convenient for all those hard to reach places.


Deluxe nozzle is versatile enough for all floor surfaces!

Part No. 58547-071(R16)

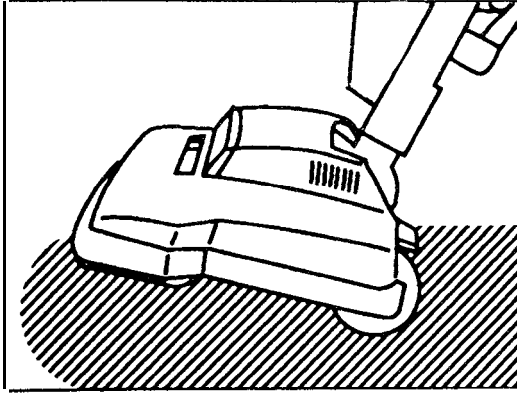


Cleaning lightweight flexible rugs

Stand on one end of rug and move cleaner toward other end or edge. Before reaching edge, push down on handle. This will lift up the nozzle (front of cleaner) and will prevent rug from clinging to cleaner. Continue to lift up nozzle so that when you have reached the edge, it is completely off the rug. Move cleaner back to start again, lower nozzle, and use only forward strokes.

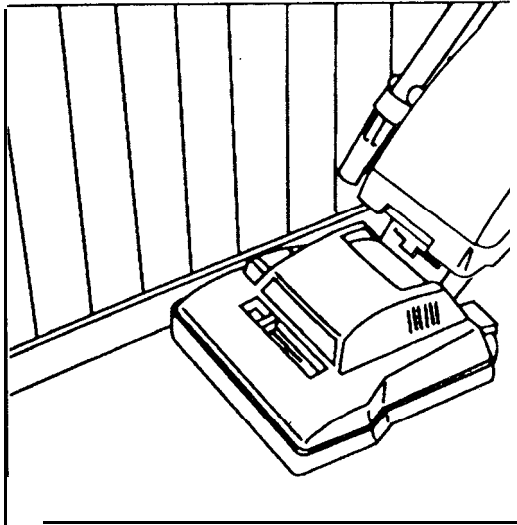

Edge cleaning

Edge cleaning is provided on both sides of nozzle to remove dirt in carpet near baseboards and furniture. Guide either side of nozzle parallel to edge of carpet or furniture.

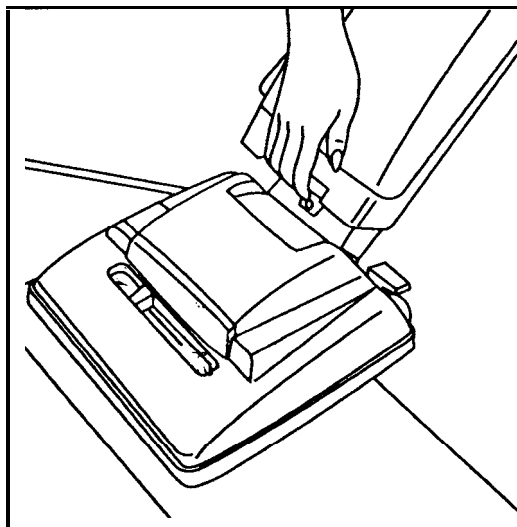

Stair cleaning

A stair cleaning handle has been designed for ease in using your cleaner on stairs. With handle in operating position, place fingers under edge of stair cleaning handle and guide cleaner with other hand on upper handle.

As an alternative, you may use the hose and furniture nozzle for stair cleaning. Clean stairs from bottom to top.

When using cleaning tools, the agitator will continue to rotate.

CAUTION: To avoid personal injury or unnecessary wear to carpet, and to prevent the cleaner from falling, use extra care if cleaner is placed on stairs.

Cleaning tools

Some models come with tools; for others, tools are available at additional cost from your Authorized Hoover Dealer (Depot), a Hoover Factory Service Center or by writing to The Hoover Company, North Canton, Ohio 44720

The tool set includes a hose, wand, crevice tool, furniture nozzle and dusting brush.

A. Attach hose to cleaner

Turn cleaner OFF before attaching or removing hose.

With cleaner handle in **upright position**, open hose door and insert hose connector until locked in position. Suction will automatically be diverted to the hose when cleaner is turned on.

To remove hose, press latch on hose connector and pull up.

Note: Hose must be removed from hose door when cleaning carpet and rugs to insure proper cleaning performance.



B. Select proper cleaning tool

1. Dusting brush may be used for carved furniture, table tops, books, lamps, lighting fixtures, Venetian blinds, baseboards, shutters, and registers.


2. Furniture nozzle may be used for upholstered furniture, draperies, tapestries, mattresses, clothing, automobile interiors, and carpeted stairs.


3. Crevice tool may be used in tight spaces, corners and along edges in such places as dresser drawers, upholstered furniture, stairs, and baseboards.

4. Wand used to give extra length to your hose. Use it with any of the above tools.

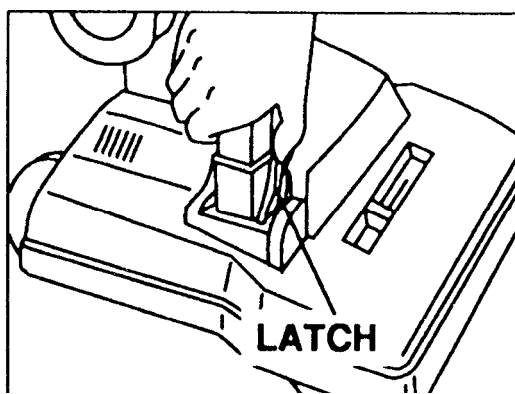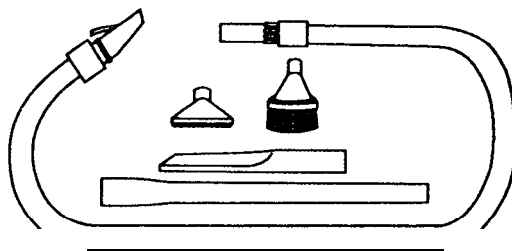

CAUTION: Agitator continues to rotate while cleaner handle is in upright position. Avoid tipping cleaner or setting it on furniture, fringed area rugs, or carpeted stairs during tool use.

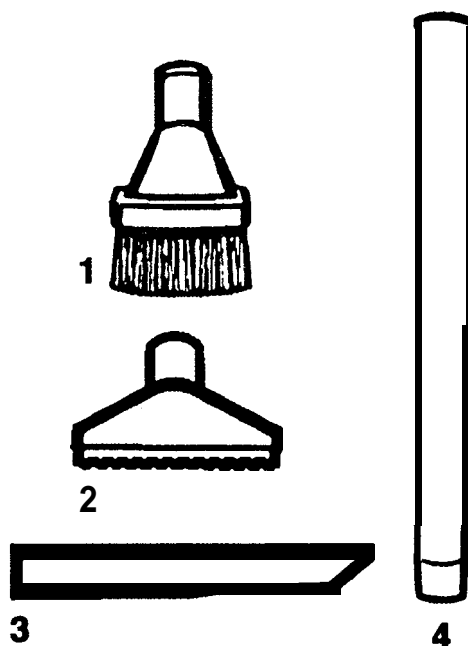

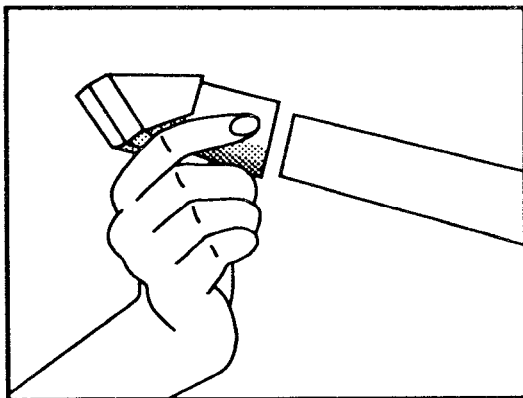


C. Attach wand and tools

The tools are attached to the hose or the wand in the same manner.

Push tool firmly onto hose; twist tool slightly to tighten or loosen connection.

Use cleaning tools with cleaner handle in upright position.

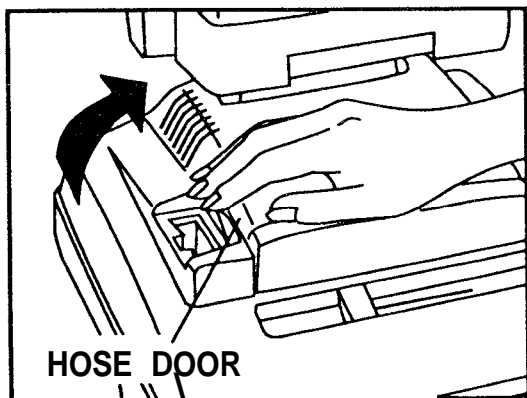

Clearing obstructions

To check for obstructions, first **turn cleaner off and disconnect from electrical outlet; then disconnect hose from cleaner**. Open hose door and carefully remove any visible obstruction. If no obstruction is found, check hose and tools. Remove obstruction. To continue using tools, re-attach hose to cleaner. If no obstruction is found and a problem persists, contact your Hoover Factory Service Center or an Authorized Warranty Service Dealer (Depot).

How to clean tools

To clean the hose, wipe off dirt with a cloth dampened in a liquid detergent. Rinse with a damp cloth. Cleaning tools may be washed in warm water with a detergent. Rinse and air dry before using.

Maintenance

The following sections are concerned with proper maintenance of the cleaner. Familiarize yourself with these home maintenance tasks and keep this owner's manual in a convenient place where you can refer to it when needed. Proper use and care of your cleaner will ensure continued cleaning effectiveness.

The bag

When to replace

Check bag from time to time. It is recommended that you change the paper bag when dirt reaches the dotted line. If more dirt than this accumulates, your cleaner may not operate effectively.

CAUTION: Very fine materials, such as face powder, cornstarch, fireplace ashes or fireplace soot, may seal the paper bag and may cause it to burst even though it is only partially full of dirt. When cleaner is used to remove material of this nature, change bag often.

Where to buy

Paper bags may be purchased from your local Authorized Hoover Dealer (Depot) or from a Hoover Factory Service Center. **When ordering bags, be sure to give the model number of your cleaner.**

What to buy

For improved cleaning effectiveness and superior filtration, use **Genuine HOOVER@ Micro Filtration Type A** disposable bags with your cleaner.

Regular **HOOVER@ Type A** disposable bags also fit your cleaner and will provide satisfactory performance.


To assure that your cleaner operates at peak performance, it is imperative that you use only **genuine HOOVER** paper bags distributed by The Hoover Company. HOOVER bags can be identified by these trademarks —




How to replace

Disconnect cleaner from electrical outlet.


Pull bag door latch forward and remove door from cleaner. Grasp sides of bag collar and pull collar from tube.

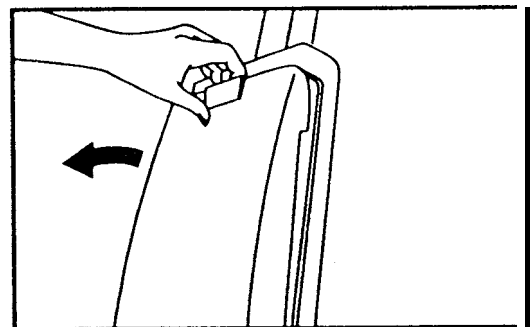

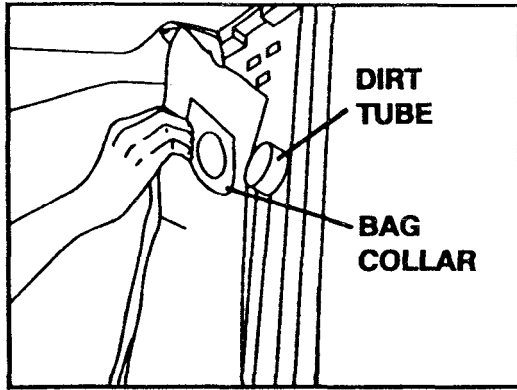

Note: **Do not** clean out old bag and reuse. Discard used bag.

Align opening in new paper bag with dirt tube in outer bag. Push bag collar firmly onto dirt tube.

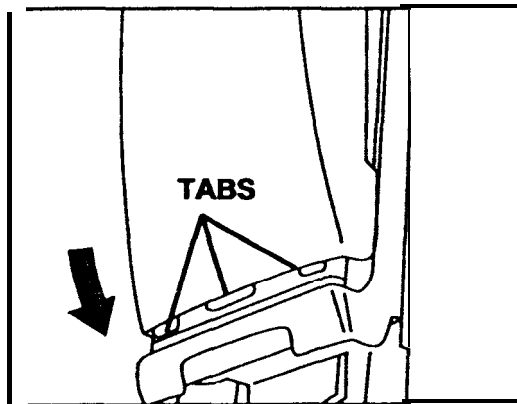

Fold top of bag down under top of bag compartment.

To replace bag door, lift up lower edge of paper bag. Insert the 3 tabs on bottom of bag door into the 3 slots on bag compartment.

Make sure all edges of paper bag are completely inside the bag compartment.

Close door.


The headlight

What to buy

This cleaner uses a 12 volt, wedge base type 912 bulb, Hoover part No. 27313-I **05**.

How to replace


Disconnect cleaner from electrical outlet.

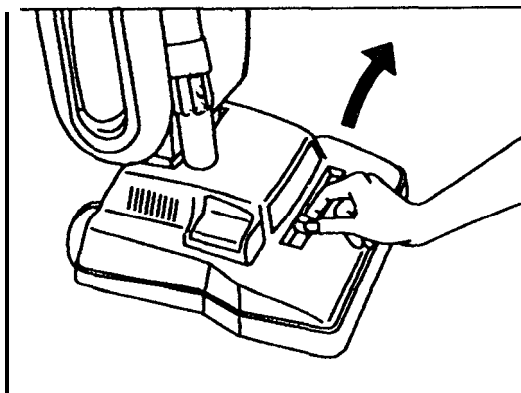


1. Remove nozzle control knob on front of hood by grasping knob and pulling up.

2. Place handle in operating position and turn cleaner over. Insert end of flat screwdriver into one of the four slots beside an arrow on bottom of cleaner.


3. For slots nearest the rear wheels, push handle of screwdriver toward cleaner handle; for remaining two slots, pry outward to release latches.

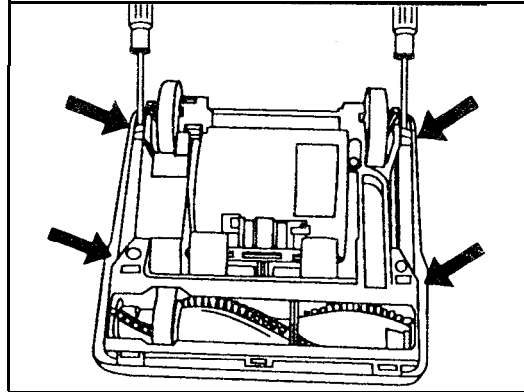


4. Turn cleaner over and lift off hood.

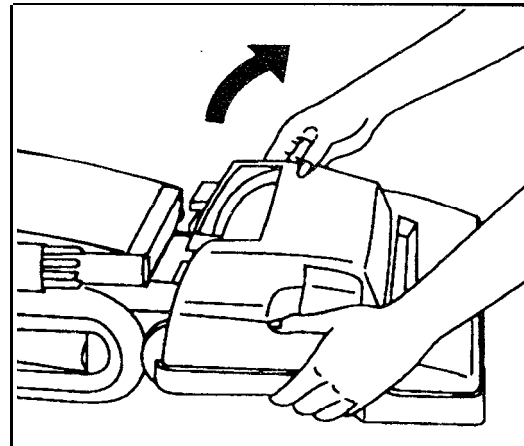

5. Remove bulb by pulling straight out of socket; push new bulb into socket until it locks in place.

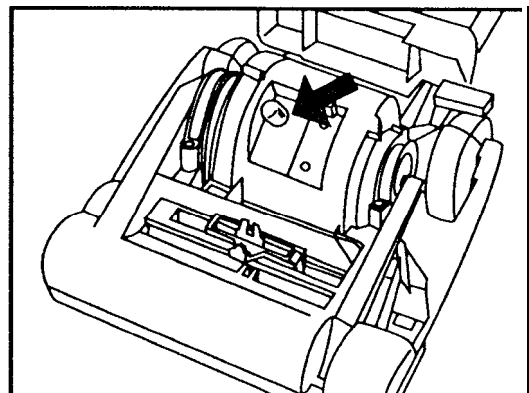

6. Place hood on cleaner body and press firmly to snap all four latches. Pull up on hood slightly to make sure all four latches are secured. Push nozzle control knob back onto front of cleaner.

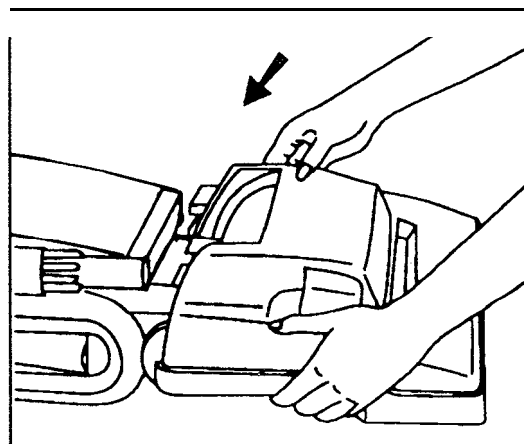

The belt



The belt on your HOOVER cleaner causes the agitator to rotate and is important for the effective operation of the cleaner. The belt is located under the bottom plate of the cleaner and should be checked from time to time to be sure it is in good condition.

When to replace

To check belt, remove bottom plate as shown in "How to replace belt."
Replace belt if it is stretched, cut or broken.

What to buy

To assure effective operation, use only genuine HOOVER belts with your cleaner. When purchasing a new belt, ask for Hoover part No. 38528-027.

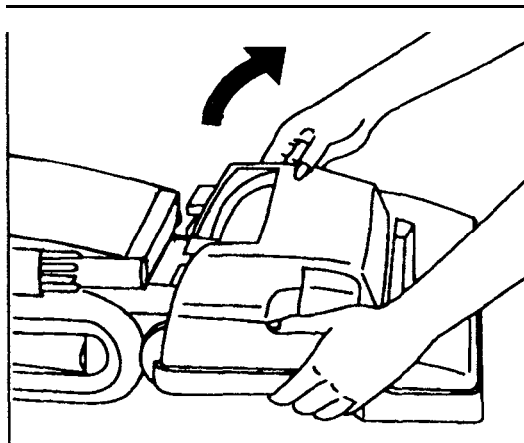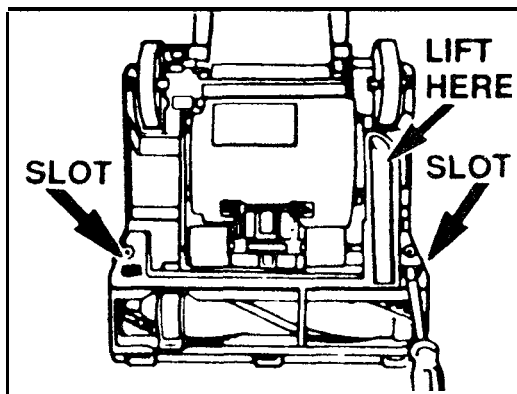

How to replace

Disconnect cleaner from electrical outlet.


1. Place handle in operating position and turn cleaner over.

To remove bottom plate, insert end of flat screwdriver into wide area of right-hand slot and push handle of screwdriver to the rear. Repeat in left-hand slot.


2. Rotate plate and remove from cleaner body.

3. Remove hood as directed in steps 1-4 of "**How to replace headlight.**"


4. If belt is not broken, pull it off the motor pulley.

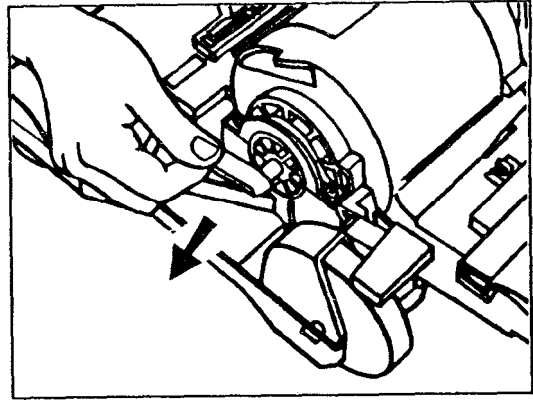


5. Return cleaner to bottom side up. Remove agitator and belt.

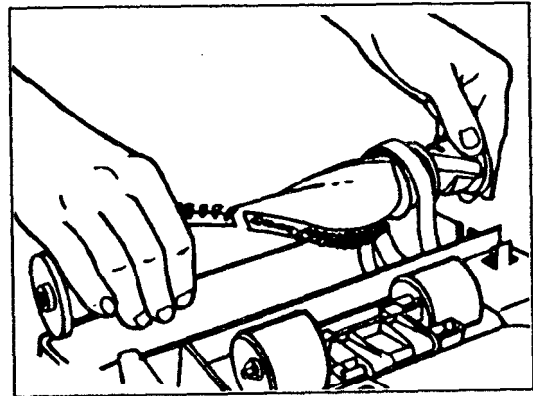


6. Slip agitator through new belt **(with lettering toward outside of cleaner)** and position belt in belt guide. Lower end of belt into opening in cleaner body; reposition agitator.

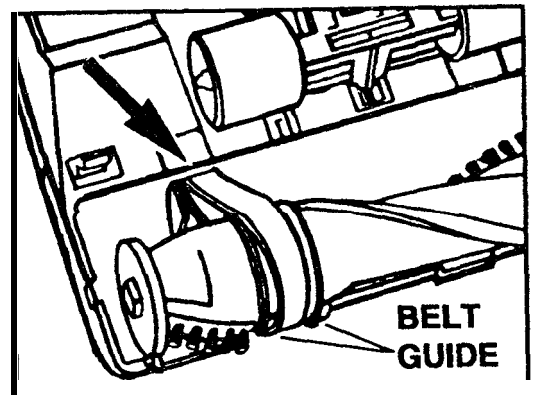

7. Place the three tabs on bottom plate into slots in front of cleaner body. Snap bottom plate into place over agitator. Turn agitator, making sure the belt is not pinched between agitator and cleaner body. The belt must rotate freely inside the belt guide. If agitator does not turn, remove bottom plate and reposition belt in belt guide.

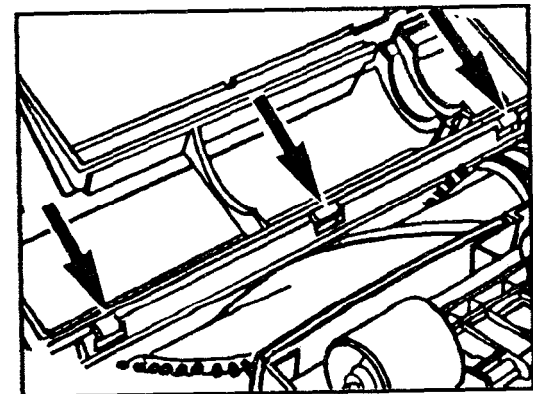


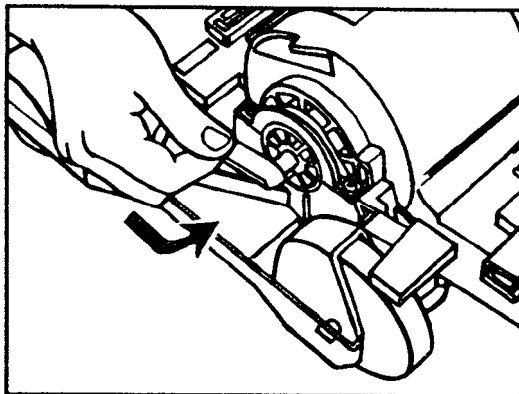

8. Turn cleaner over and stretch new belt onto motor pulley.

Extra effort may be required to stretch belt onto pulley.

9. Replace hood and nozzle control knob.

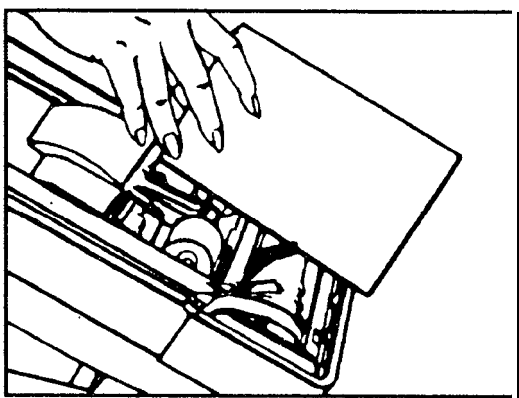

The agitator When to replace

Disconnect cleaner from electrical outlet.

When agitator brushes are worn, the agitator should be replaced.

To check condition of brushes, move edge of card across bottom plate while turning agitator. To maintain cleaning effectiveness, replace agitator if brushes do not touch card.

What to buy

The agitator may be replaced with either a single or double row of brushes.

Single row of brushes - Hoover part **No. 48414-051.**

Double row of brushes - Hoover part **No. 48414-049.**

How to replace

Disconnect cleaner from electrical outlet.

1. Remove bottom plate and hood as described in 'How to replace belt'. Remove agitator from cleaner.

2. Discard old agitator.

3. Replace agitator and belt as shown in steps 6-9 of "How to replace belt".

If you have a problem

This appliance was inspected thoroughly and was in good operating condition when it was shipped from the factory. If a minor problem occurs, it usually can be solved quite easily when the cause is found. Therefore, this check list is provided for your convenience.

Problem	Possible cause	Possible solution
Cleaner won't run	1. Not firmly plugged in. 2. No voltage in wall plug. 3. Blown fuse/tripped breaker.	1. Plug unit in firmly. 2. Check fuse or breaker. 3. Replace fuse/reset breaker.
Cleaner won't pick up	1. Broken or worn belt. 2. Agitator brush roll worn. 3. Bag full. 4. incorrect carpet height setting.	1. Replace belt. 2. Replace brush roll. 3. Change paper bag. 4. Move nozzle control knob to type of carpet being cleaned.
Cleaning tools won't pick up	1. Hose clogged. 2. Hose connector inserted incorrectly.	1. Remove hose and tools; remove obstruction. 2. Reinsert hose connector properly (page 15).
Cleaner hard to push	1. incorrect carpet height setting.	1. Move nozzle control knob to a higher setting.

Lubrication

The motor is equipped with bearings which contain sufficient lubrication for the life of the motor. The addition of lubricant could cause damage. **Do not add lubricant to motor bearings.**

The agitator is equipped with two ball bearings that should be lubricated periodically by a Hoover Factory Service Center or an Authorized Hoover Warranty Service Dealer (Depot).

Service

To obtain approved HOOVER service and genuine HOOVER parts, locate the nearest **Hoover Factory Service Center or Authorized Hoover Warranty Service Dealer (Depot)** by:

- checking the Yellow Pages under "Vacuum Cleaners - Household" OR -
- checking the list of Factory Service Centers provided with this cleaner OR -
- calling 1-800-944-9200 for an automated referral of authorized service outlet locations (U.S. only).

Do not send your cleaner to The Hoover Company in North Canton for service, this will only result in delay.

if further assistance is needed, contact The Hoover Company Consumer Response Center, North Canton, Ohio 44720
Phone: 216-499-9499.

In Canada, contact Hoover Canada, Burlington, Ontario L7R 4A8,
Phone: 1-800-263-6376.

Always identify your cleaner by the **complete** model number when requesting information or ordering parts. (The model number appears on the bottom of the cleaner.)

Cleaning Effectiveness Per Amp Rating

This is not an Amp rating. Amps do not measure dirt removal, only the amount of electricity used. Cleaning Effectiveness Per Amp is determined by dividing this model's Cleaning Effectiveness* by its Amps.

***Cleaning Effectiveness** is the percent value obtained from dividing:

- (a) the geometric mean of the amount of embedded carpet dirt removed in testing under ASTM Test Method F608-89, by
- (b) the value 29 (the geometric mean of the midpoints of the % dirt pickup scales selected by Hoover as a reference for its rating system).

Full One Year Warranty (Domestic Use)

Your HOOVER® appliance is warranted in normal household use, in accordance with the Owner's Manual against original defects in material and workmanship for a period of one full year from date of purchase. This warranty provides, at no cost to you, all labor and parts to place this appliance in correct operating condition during the warranted period. This warranty applies when the appliance is purchased in the United States including its territories and possessions, or in Canada or from a U. S. Military Exchange. Appliances purchased elsewhere are covered by a limited one year warranty which covers the cost of parts only. This warranty does not apply if the appliance is used in a commercial or rental application.

Warranty service can only be obtained by presenting the appliance to one of the following authorized warranty service outlets. Proof of purchase will be required before service is rendered.

1. Hoover Factory Service Centers.
2. Hoover Authorized Warranty Service Dealers (Depot).


This warranty does not cover pick up, delivery, or house calls; however, if you mail your appliance to a Hoover Factory Service Center for warranty service, transportation will be paid one way.

While this warranty gives you specific legal rights, you may also have other rights which vary from state to state (or province).

If further assistance is needed, or if there are questions concerning this warranty or the availability of warranty service outlets, write or phone the Consumer Response Center, The Hoover Company, 101 East Maple St., North Canton, Ohio 44720. Phone 216-499-9499.

For an automated referral of authorized service outlets in the U.S.A., phone 1-800-944-9200.

In Canada, contact Hoover Canada, Burlington, Ontario L7R 4A8. Phone 1-800-263-6376.

Hoover and  are registered trademarks
THE HOOVER COMPANY, NORTH CANTON, OHIO 44720